

SOFT Balsa BLOCK FILL FROM MAPLE MOUNT FORWARD TO SPINNER RING


TAP & HELICOIL FOR ENGINE. ENGINE SCREWS TO PADS, PADS SCREW TO MAPLE MOUNTS  
3/16" ALUMINUM PADS

Balsa BLOCK FROM DOTTED LINE FORWARD

CANOPY: TRIM SIG 11" WWII 1/4" ALL THE WAY AROUND

CARVED/HOLLOWED BLOCK FROM THIS POINT FORWARD, SHEETED FORMERS FROM THIS POINT AFT

VERTICAL STAB: 2 PIECES OF 1/4" LAMINATED & HOLLOWED. TAPER FORE & AFT, AS WELL AS BOTTOM TO TOP. AIRFOIL INBOARD SIDE LIKE A NOBLER - NO OFFSET!!

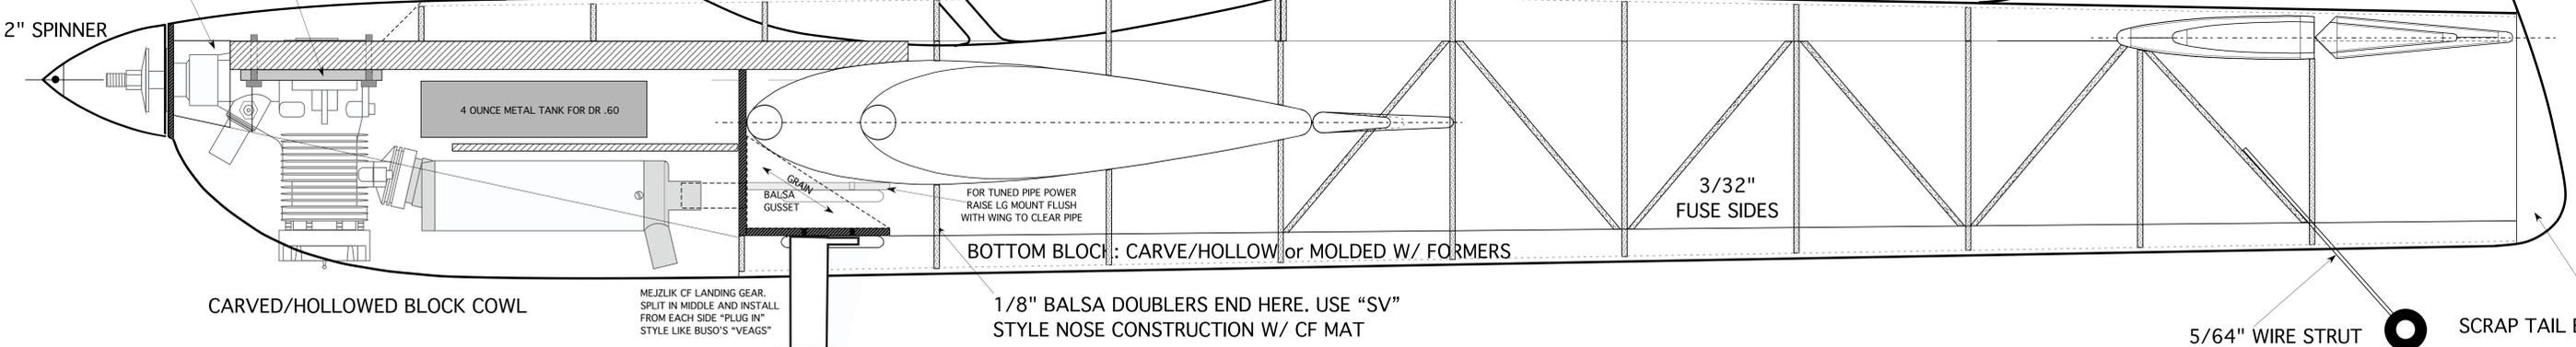

▲ 12.5" PROP CLEARANCE

2" WHEELS

PANTS: MEJZLIK CF



**EuroStyle** DESIGNED BY RICK CAMPBELL  
FEATURING EVOLVED "LIGHTING"  
AERODYNAMICS BY DAVE COOK

